

Matala Pond Vac II

Suction Adjustment Ring

- To extend vacuum time turn yellow ring on handle to open vent.
- Hold finger over vent when increased suction is needed.
- Release finger when less suction is needed.

IE: To vacuum heavy particles place finger over the hole.



Turn yellow ring on handle to open air vent.

Use finger to adjust air flow.

